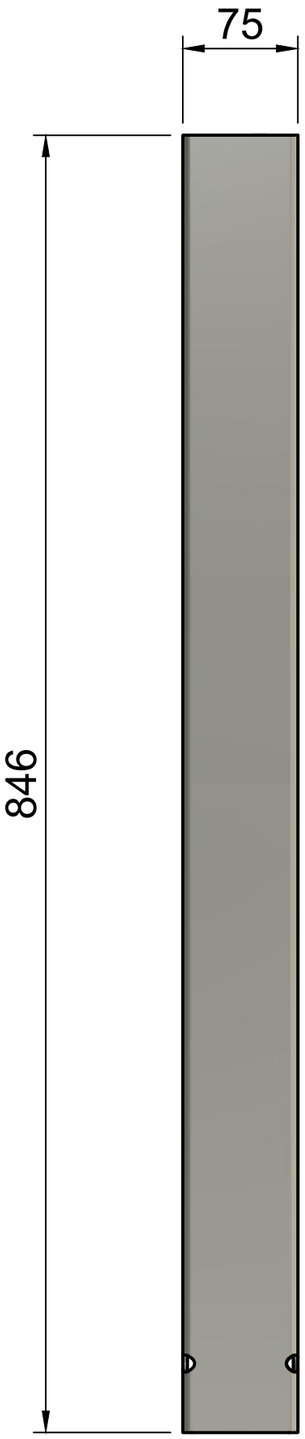

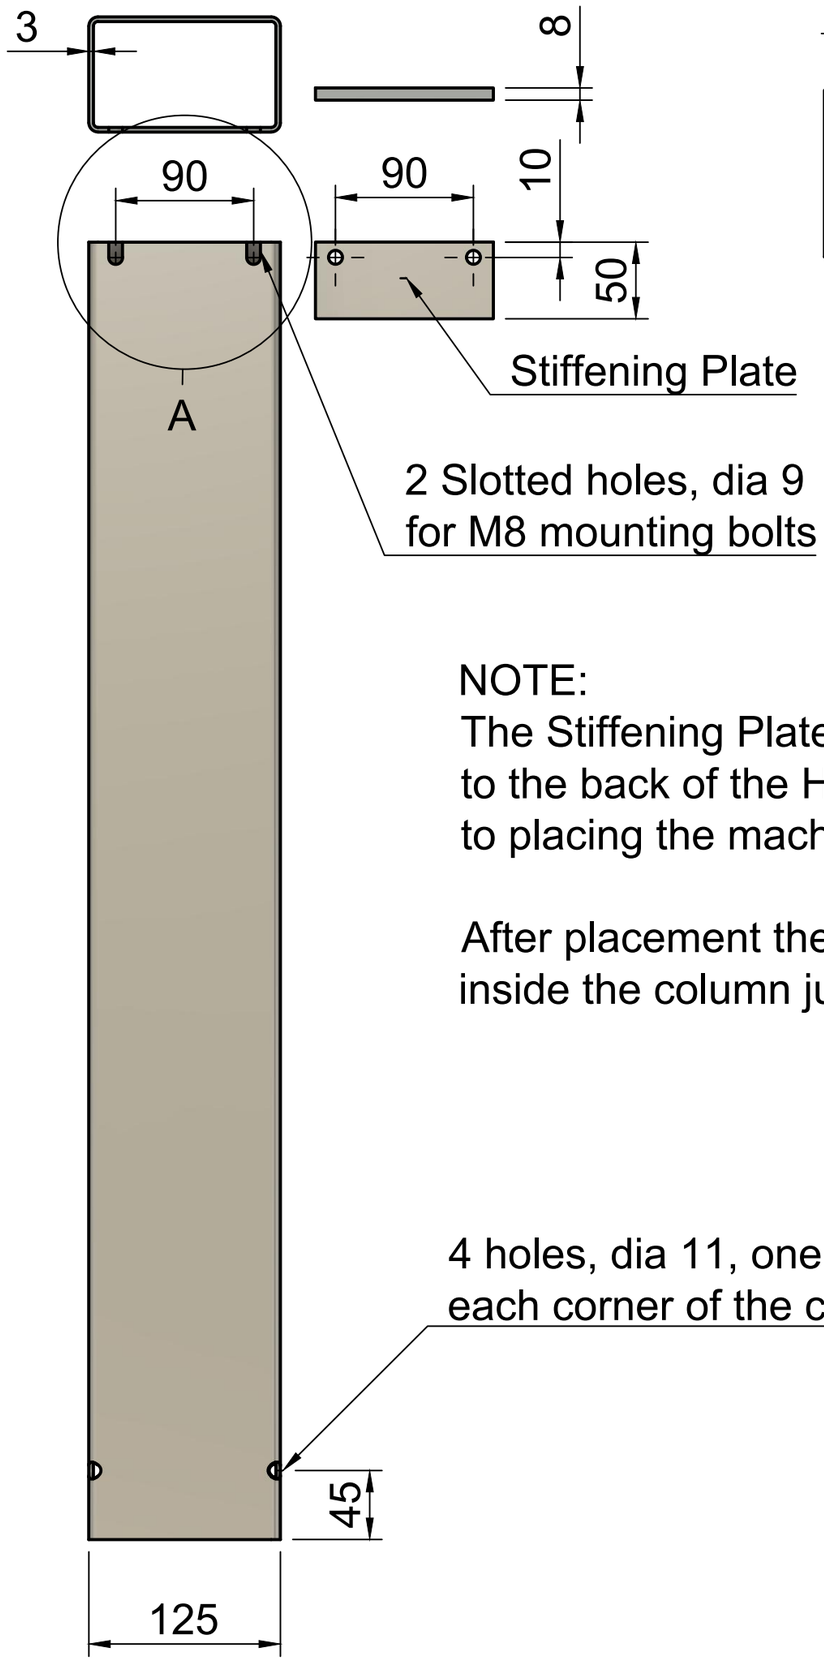

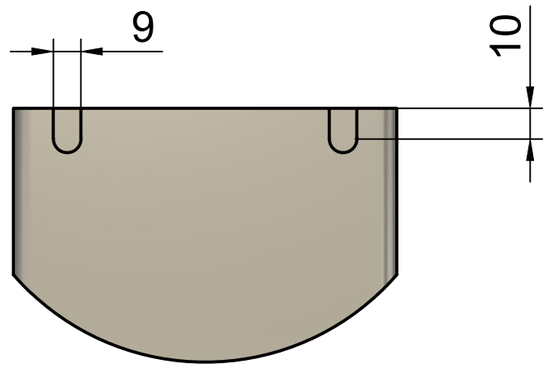

Detail A
(1:2)

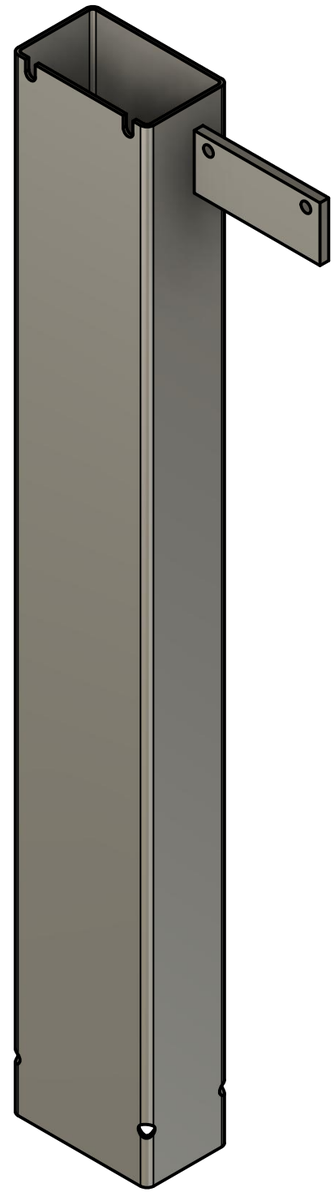

NOTE:
The Stiffening Plate should be loosely bolted to the back of the Handyman machine prior to placing the machine on the stand.

After placement the plate will be positioned inside the column just behind the front face.

HANDYMAN - COLUMN

Material: 125 x 75 x 3 RHS, steel
Design: A Bottomley, 5 July 2020